



GLOCK "SAFE ACTION"

GLOCK BACK STRAPS

Parts:



1. Trigger Housing Pin
Short Pin:
Initially mounted on pistol w/o back strap.
For pistol w/o back strap.
Long Pin:
For use with optional back straps.



2. Disassembly Tool (MBS)
Tool to remove/install the Trigger Housing Pin.



3. Back Straps
Two different sizes available.
(See inner side for size markings.)

7773/11 11



Back Straps Markings	Compatible Gen4 Models*
G17 / G22 - 2 mm - M	G17, G22, G31, G34, G35, G37
G17 / G22 - 4 mm - L	
G19 / G23 - 2 mm - M	G19, G23, G32, G38
G19 / G23 - 4 mm - L	
G26 / G27 - 2 mm - M	G26, G27, G33
G26 / G27 - 4 mm - L	
G20 / G21 - 2 mm - M	G20, G21
G20 / G21 - 4 mm - L	
G29 / G30 - 2 mm - M	G29, G30
G29 / G30 - 4 mm - L	

* Check availability with your local dealer.

Frame Size Options:

Without Back Straps	→	Short Frame (SF-Frame)
Medium Back Strap	→	Medium Frame (Standard Frame) +2 mm
Large Back Strap	→	Large Frame + 4 mm

Trigger Housing Pin Sizes


Without Back Straps	→	short Pin
Optional Back Strap mounted	→	large Pin

GLOCK Pistols with Modular Back Strap (MBS) Frame


How to install:



Step 1:
Remove Trigger Housing Pin with the Disassembly Tool (MBS).

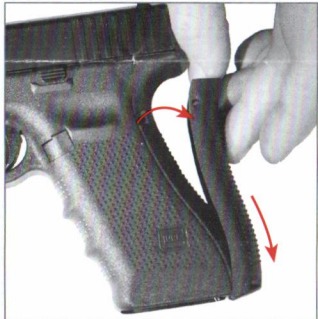


Step 2:
Remove GLOCK Back Strap, if it is mounted.

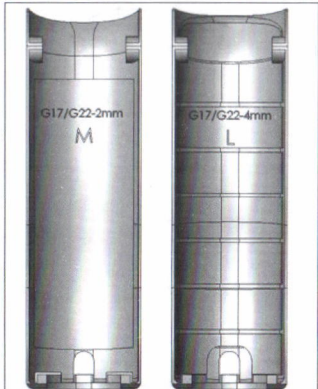


Step 3:
Choose different frame size option.
(see table on top of the page, size markings on inner side of the GLOCK Back Strap)

- Mount chosen GLOCK Back Strap.
(Continue step 4)
- Pistol remains without back straps.
(Continue step 5)

Step 4:
Hook the GLOCK Back Strap to the lower backside of the frame, then push top towards frame.

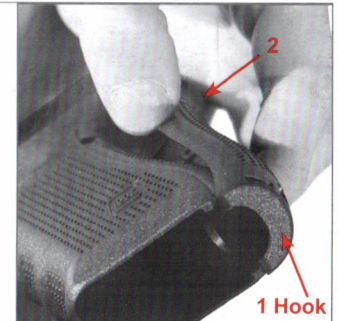

Step 5:
Install corresponding Trigger Housing Pin (see table on top of the page). Use the flat side of the Disassembly Tool (MBS) to place the pin correctly while keeping the back strap in position with the other hand.

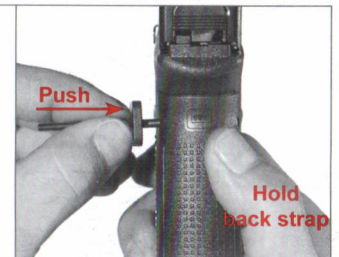

Step 6:
Verify that Trigger Housing Pin is correctly centered (not protruding from frame surface on either side).

Take care:

Attention in case of using wrong pin size:
If pin is too long (pistol w/o back straps), it could feel uncomfortable while shooting.
If pin is too short (pistol with back strap) back strap may become loose.

